




TIMBERBITS
HELPING YOU CREATE WITH WOOD

Keyring Pen Kit

Drill Bit required – 7mm

Bushings required – Bushing – Slimline (Code: A0023)

Turning Diameters

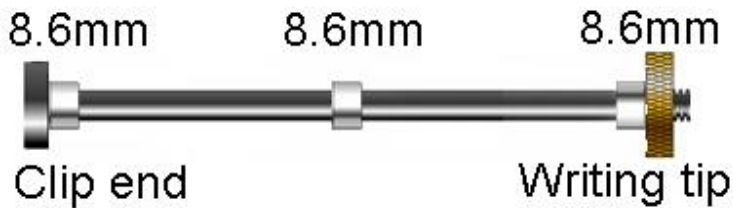

Turn the Brass Tubes to the diameter above.

Assembly

Assembling this kit is very similar to the Slimline Pen Kits - only this is a smaller version

1. Press the Nib onto the brass tube.
2. Press the twist mechanism, brass end first into the opposite end of the brass tube with the nib until the chrome section meets the end of the brass tube. Install the refill (push the Refill Guide into the back end of the Mini Refill. If it is a loose fit, then slightly squash the end of the Refill to get a tighter fit) and actuate the twist mechanism to determine how far the refill point extends past the writing tip. If necessary, remove the refill and press the twist mechanism slightly further into the brass tube to expose more of the refill. Be careful not to press the twist mechanism too far into the tube as it is difficult to pull out.
3. Slide the Centre Band over the twist Mechanism.
4. Press the End cap onto the other barrel.
5. Slide the upper tube over the exposed twist mechanism.
6. Slide the Key Ring into the End Cap to complete the pen.



TIMBERBITS

HELPING YOU CREATE WITH WOOD

