



# TIMBERBITS

HELPING YOU CREATE WITH WOOD

## Perfume Pen Kit

Drill Bit required – 8.0mm

Bushings required – Bushing - Perfume Pens (Code: A0020)


### Turning Diameters

Turn outside diameter of the pen blank down to the bushings for both tubes.

### Assembly

Layout the parts as shown below.

1. Press end caps in one end of each of the blanks.
2. Press centerband into the other end of the short tube.
3. Drop wick (long cotton filled straw) into the other end of the long tube, then press nib into long tube.
4. Insert tip.

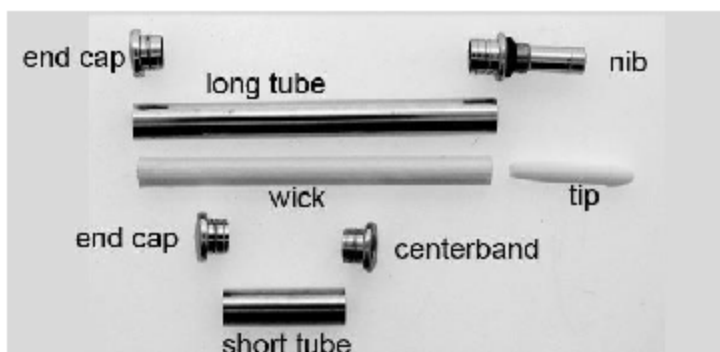

### Loading Perfume Pen with Perfume

The traditional way to fill the pen is to dip the tip while on the pen into the perfume bottle and hold for about a minute or two. The wicking action of the cotton will draw the perfume up from the bottle to wick of the pen. Please note that tip may be loose in the nib before filling - it is designed this way as the tip swells when filled.